

Assigning shades to channels for the Multi-Channel Remote

When you receive your multi-channel remote with your shades, we have already programmed the shades to the remote. It is necessary to assign the shades to the channels you want them to operate on before you can control them from the remote. The shades are listed in the remote: Shade 1, Shade 2... etc. It is first necessary to determine which shade number on the remote corresponds to each window. They may not necessarily be in order.

MULTI CHANNEL REMOTE CHANNEL ASSIGNMENT INSTRUCTIONS

Section A. Identifying shades

1. Press and hold the menu/right button until the menu appears.



2. Select CHANNEL by pressing and releasing the menu button.



3. Start with Shade 1 (there will be an arrow to the left indicating which shade is currently selected.)



4. Press and hold the menu/right button until a check mark appears to the right of the shade.
Note: If you press and release the menu/right button the remote will change channels. Press and release the left or right button on the remote to change channels.



- The shade will jog when the check mark appears. Notate the window position of the shade that jogged on the last page of the owner's manual.

Shades Name/Location	Channel Assignment Shades on the same channel will operate as a group.												
	1	2	3	4	5	6	7	8	9	10	11	12	
Example Shade 1: Kitchen			X	X	X								
Shade 1													
Shade 2													
Shade 3													
Shade 4													
Shade 5													
Shade 6													
Shade 7													
Shade 8													
Shade 9													
Shade 10													
Shade 11													
Shade 12													
Shade 13													
Shade 14													
Shade 15													
Shade 16													
Shade 17													
Shade 18													
Shade 19													
Shade 20													
Shade 21													
Shade 22													
Shade 23													
Shade 24													

- Go back into the menu by pressing and holding the menu/right button until the menu appears.



- Select CHANNEL by pressing and releasing the menu button.



8. Remove the check mark from Shade 1 by holding the menu/right button until the checkmark disappears.



9. Arrow down to Shade 2.



10. Press and hold the menu/right button until a check mark appears to the right of the shade.



11. Note the window position of the shade that jogged on the last page of the owner's manual. Repeat this process until each shade has been identified.

Section B. Assigning channels once all shades are identified.

12. Select the channel you want to assign the shade to by scrolling left or right.



13. Press and hold the menu/right button until the menu appears.



14. Select the shade you want to assign to the channel by scrolling up or down
Note: If you press and release the menu/right button the remote will change channels. Press and release the left or right button on the remote to change channels.



15. Press and hold the menu/right button until a check mark appears to the right of the shade.
The shade will jog.



Repeat steps 12 through 15 for each shade.