


TASK: Z-wave Cellular and Pleated Endcap Assembly (2019 shades and newer)

Use If/When: Z-wave endcap button or control board needs replaced.

Tools Needed: None

1. Disconnect power from the shade.

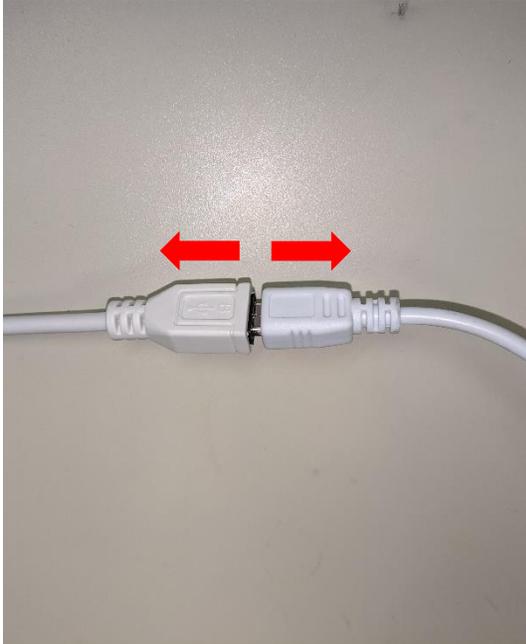

2. Disconnect the motor harness from the endcap.





TASK: Z-wave Cellular and Pleated Endcap Assembly (2019 shades and newer)



Use If/When: Z-wave endcap button or control board needs replaced.

Tools Needed: None

3. Remove the endcap from the headrail gripping the assembly and pulling away from the headrail. *Note: It may be necessary to wiggle the endcap while pulling to disengage from the notch in the headrail.*

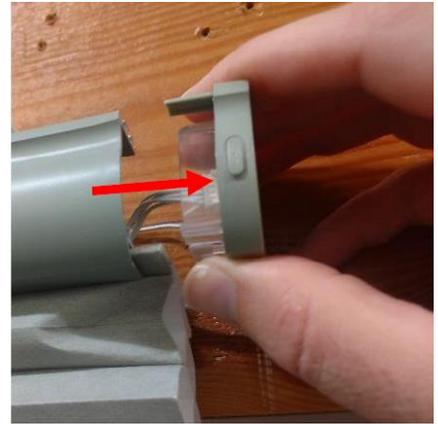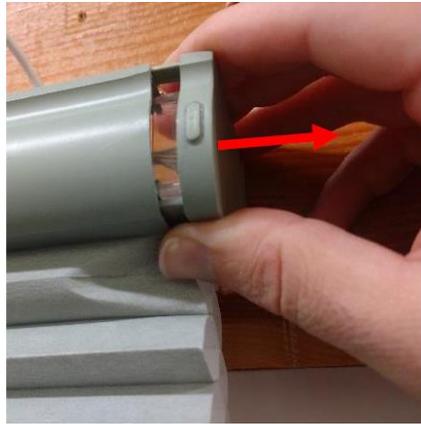

4. Disengage the cover from the housing. Position thumb on the cover as shown and apply force in an outward and downward motion.

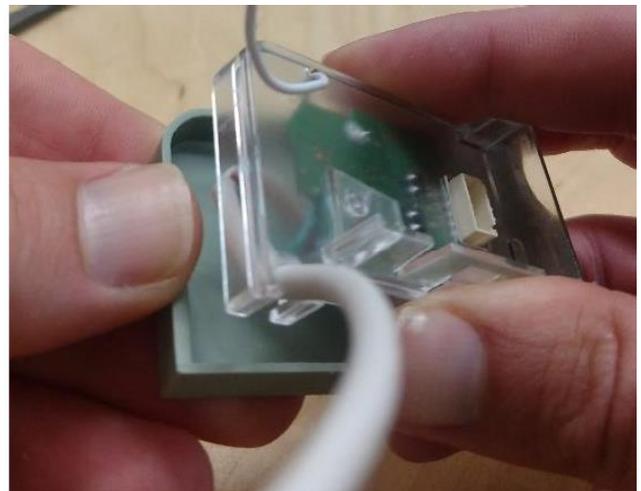
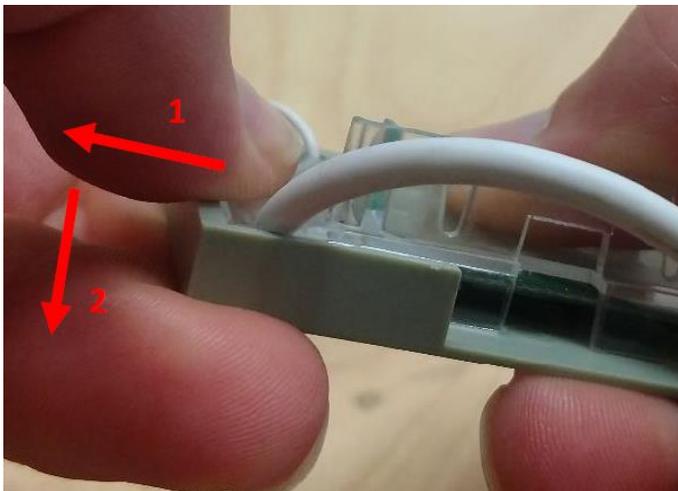


TASK: Z-wave Cellular and Pleated Endcap Assembly (2019 shades and newer)



Use If/When: Z-wave endcap button or control board needs replaced.

Tools Needed: None

5. Gently raise control board out of housing to allow access to the push button.

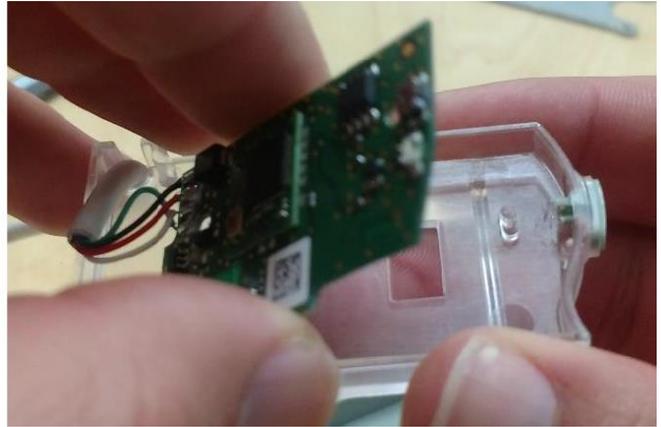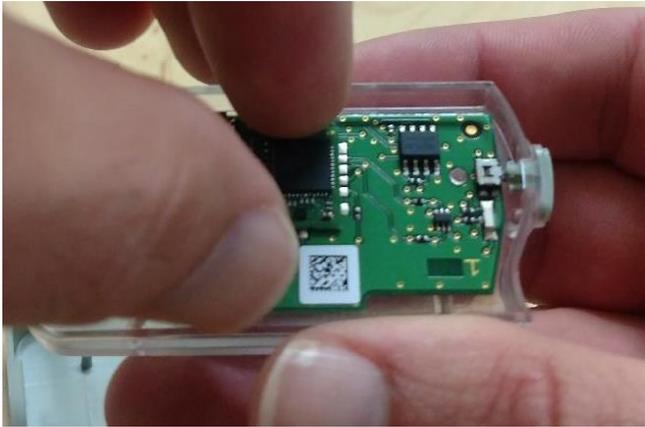

6. Remove the old push button by pushing out of the housing as shown below.

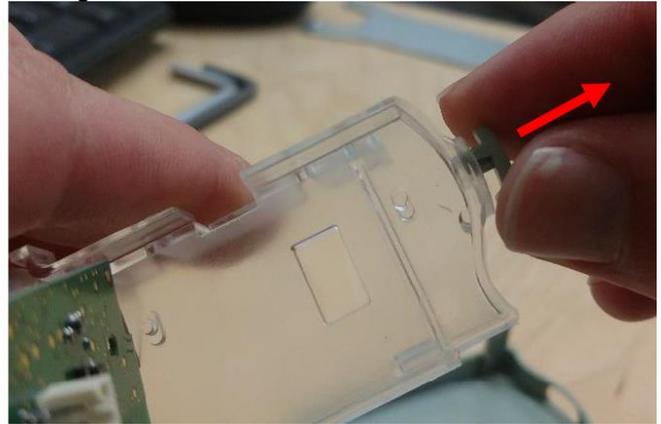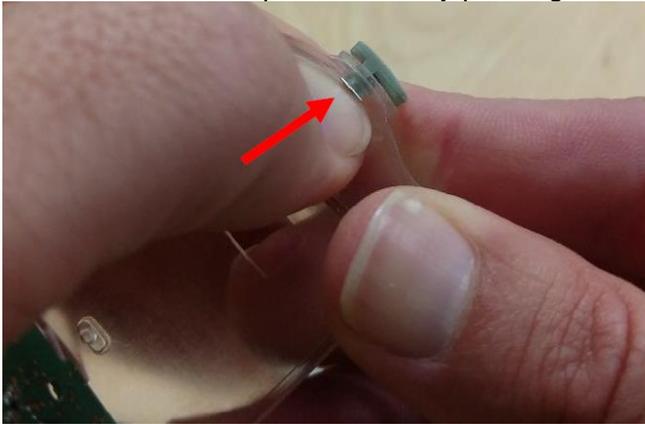

TASK: Z-wave Cellular and Pleated Endcap Assembly (2019 shades and newer)

Use If/When: Z-wave endcap button or control board needs needs replaced.

Tools Needed: None

7. Replace the control board into the original position in the housing



8. Insert the new push button into the housing by pressing into the housing as shown.



TASK: Z-wave Cellular and Pleated Endcap Assembly (2019 shades and newer)


Use If/When: Z-wave endcap button or control board needs needs replaced.

Tools Needed: None

9. Reattach the cover to the housing.



10. Reconnect the motor harness to the endcap.

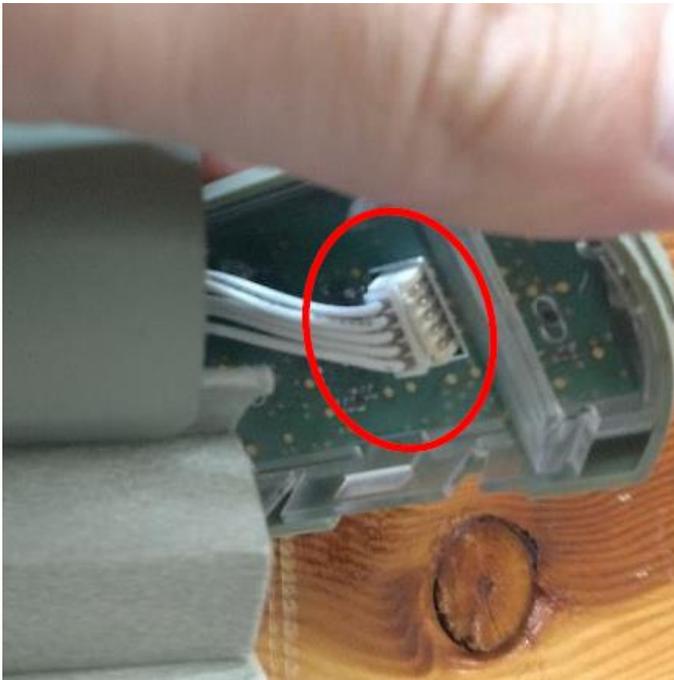

11. Install the endcap into the headrail.



TASK: Z-wave Cellular and Pleated Endcap Assembly (2019 shades and newer)

Use If/When: Z-wave endcap button or control board needs needs replaced.

Tools Needed: None

- 12.** Reconnect power. *Note: If a new control board was also installed, the shade's limits will need reprogrammed. Refer to the appropriate users guide for programming instructions.*

