

CELLULAR AND PLEATED SHADES

HEADRAIL DEPTH MOUNTING GUIDE

FOR CORDLESS, CONTINUOUS-LOOP, AND MOTORIZED LIFT


1. Place the appropriate pleat size headrail profile inside the window opening.
2. With guide in the window, check to see if the headrail has the minimum depth to mount. Indicators for fully recessing headrail in window casing/molding are also available to check.

If product configuration is not found here, please reference product information guide.

NOTE: When ordering a motorized shade, add 1 1/8" to accommodate the battery pack.


SPRINGS WINDOW FASHIONS 
the Best Experience Company

20-0278-00

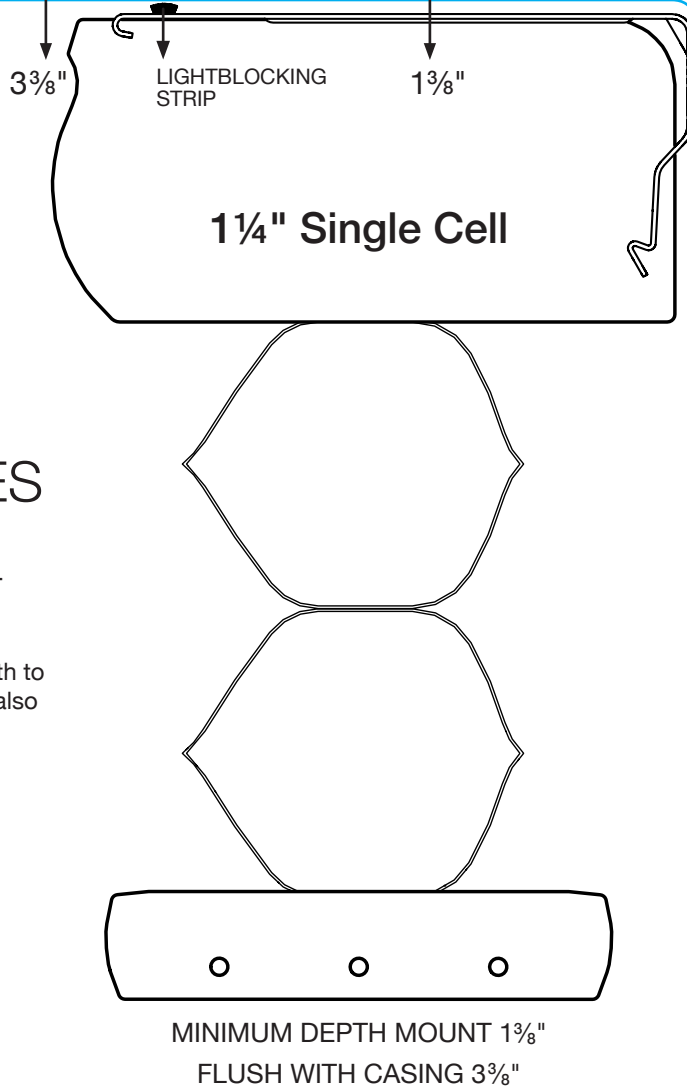

MINIMUM DEPTH MOUNT 5/8"

FLUSH WITH CASING 2 3/8"




**3/8" Single Cell
and 1" Pleat**

MINIMUM DEPTH MOUNT 5/8"

FLUSH WITH CASING 2 3/8"

MINIMUM DEPTH MOUNT 5/8"

FLUSH WITH CASING 2 5/8"



**3/4" Single Cell,
1/2" Double Cell,
and 2" Pleat**

2 5/8"

LIGHTBLOCKING
STRIP

5/8"